



#P598 - Birth of Jesus

Beautiful words of hope! 24"W x 37"H

GENERAL SCROLLSAW TIPS & TECHNIQUES

The following scrollsaw tips and techniques are intended to get you started and on your way to scrollsaw success. Not only will you find these techniques helpful in completing the this project, you will also find that they can be applied to many other scrollsaw projects as well.

HARDWOODS VS PLYWOODS

Selecting the type of material you will use is very important for the final outcome of your project. This project has been designed so that hardwoods, plywoods, or a combination can be used to create your work of art.

Hardwoods have their advantages as well as their disadvantages. They come in a variety of species, colors and grain patterns, yet they are more time consuming requiring more sanding, are more likely to warp and are more expensive to use.

Plywoods, on the other hand, are less expensive, require less sanding, and come in a variety of standard thicknesses. They also are less likely to develop cracks or warp. We do, however, recommend that you use a top grade plywood without voids, such as the Baltic and Finnish birches.

SANDING

For most projects, it is best to sand the work piece prior to applying the paper pattern and cutting the design. Once you've cut the design, and removed the paper pattern, it may be necessary to lightly sand any glue residue remaining, along with any "fuzz" on the bottom side.

BLADE SELECTION

There are many opinions pertaining to which blade to use with which type and thickness of material, as well as, with how intricate the design in the project is. The more time you put into scrolling, the more your choice of which blade to use will become personal preference. For the beginning scroller we make the following recommendations to get you started:

Material Thickness	Blade Size Recommended
1/16" - 1/4"	#2/0 or #2
1/4" - 1/2"	#5 or #7
1/2" - 3/4" or thicker	#7 or #9

USING THE PATTERNS

Downloadable patterns give you the advantage of printing the patterns on your own printer at your own convenience. Be sure to download all of the file and save it to a disk or your harddrive according to your computer software's instructions.


Once you have printed the number of pattern pieces that you will need to complete your projects, you are ready to apply the pattern to your work pieces.

Apply the repositionable spray adhesive as directed in the next section. If your project requires piecing 2 or more sheets of paper together to make the full-size pattern piece, simply follow the instructions below for accurate alignment.



Step 1

Using a straightedge and a craft knife, cut on the dashed "Pattern Overlap Lines" to remove the excess paper.

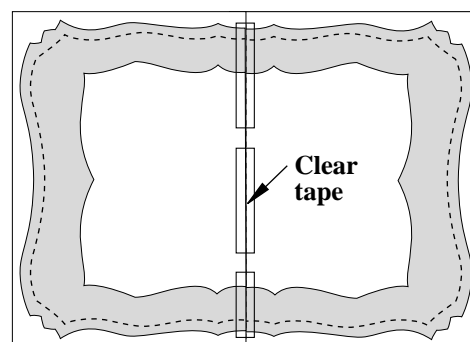

Step 2

Next, align the sections and secure together with clear tape. Now, apply the repositionable spray adhesive to the backside of the paper pattern as instructed in the next section.

REPOSITIONABLE SPRAY ADHESIVE

Using a repositionable spray adhesive is the easiest and quickest way to transfer a pattern to your work piece after photo copying it. In a well ventilated area, lightly spray the backside of the paper pattern. Allow it to dry only until tacky - approximately 20 - 30 seconds. Then apply it to the work piece, smoothing any wrinkles if necessary.

Two common problems that sometimes occur when using repositionable spray adhesive for the first time is applying the right amount onto the back of the pattern. Spraying too little may result in the pattern lifting off of the project before you have finished cutting. If this occurs, clear scotch tape can be used to secure the pattern back into position. On the other hand, spraying too much will make it difficult to remove the pattern, If this occurs, simply use a hand held hair dryer to heat the glue, which will loosen the pattern allowing it to be easily removed.



DRILLING STARTER HOLES

When drilling starter holes it is best to drill close to a corner, rather than in the middle of the waste areas, as it will take less time for the blade to reach the pattern line.

STACK CUTTING

Stack cutting is fairly simple to do and can save you a lot of time when you have 2 or more identical pieces to cut for a project. If you are fairly new to scrollsawing and stack cutting, we recommend cutting no more than a total thickness of 1/2" for best results.

On projects with fairly simple shapes to cut out, 2 or 3 layers could be held together by double-sided tape, or by using spray glue on paper to sandwich between the work pieces.

On more intricate projects we suggest using #18 wire nails or brads slightly longer than the total thickness of the stack you are cutting. Tack the nails into the waste areas you will cut out, along with a few around the outside of the project. If the nail has gone through the bottom of the work piece, use a hammer to tap it flush, or use coarse sandpaper to sand the points flush with the bottom of the work piece.

If you are stack cutting hardwoods, do not tack the nail too close to the pattern line or it may cause the wood to split. Another option would be to predrill for the nails with a slightly smaller drill bit so the nail will fit snugly and hold the layers together securely.



SAWING THIN WOODS

Occasionally you may find it difficult to control your workpiece when cutting in thin hardwoods or plywoods. The following suggestions should help to eliminate or reduce this problem.

1. If you have a variable speed saw, reduce the speed to 1/2 to 3/4 of high speed.
2. If you do not have a variable speed saw, it will help to stack cut 2 or more layers of your material to keep better control of the workpiece.
3. For cutting any thickness of material it is very beneficial to keep at least one hand, if not both, partially touching the table with your fingers for better control.
4. Using a smaller blade with more teeth per inch helps to slow down how fast the blade is cutting. But keep in mind that if the blade is leaving burn marks you will need to slow the speed down or use a blade with less teeth per inch.

VEINING



Veining is a simple technique that will bring a lifelike appearance to your project. The veins of a leaf or the folds of clothing will look more realistic when this technique is incorporated. To vein, simply saw all solid black lines as indicated on the pattern. Some areas of the pattern you will be able to vein by sawing inward from the outside edge, while in other areas you will need to drill a tiny starter hole for the blade.

AUXILIARY TABLE

Most scrollsaws on the market today have an opening in the table around the blade that is much larger than what you really need. This often causes small and delicate fretwork to break off on the downward stroke of the blade. An easy solution is to add a wooden auxiliary table to the top of the metal table on your saw.

To make an auxiliary table, choose a piece of 1/4" - 3/8" plywood similar to the size of your current saw's table. If you choose, you can cut this plywood to the same shape as the metal table on your saw, or any shape or size you prefer. However, we do recommend that you make the table larger than what you think you will need for the size of the projects you will make in the future.

Next, set the auxiliary table on top of the metal table. From the underside of the metal table, use a pencil to mark the location where the blade will feed through. Then turn the auxiliary table over and drill a 1/16" - 1/8" diameter hole, or slightly larger than the blade you will be using.

Finally, apply a couple of strips of double-sided carpet tape to the metal table on each side of the blade. Then, firmly press the auxiliary table onto the double-sided carpet tape, making sure that the blade is centered in the hole.



FINISHING TECHNIQUES

If you've made your project from hardwood, we recommend dipping your project in a dishpan type of container that contains a penetrating oil such as Watco, Tung, or others. After dipping, allow the excess oil to drain back into the pan and then follow the manufacturer's instructions.

If you have chosen to use plywood, such as Baltic Birch, you can use any of the wide variety of wood stains available on the market. We do, however, recommend sanding the surface thoroughly, in order for the plywood to accept the stain more evenly.


As a final finish step, we highly recommend using a clear varathane type spray for a protective coating.




The Birth of Jesus

And there were shepherds living
out in the fields nearby,
keeping watch over their flocks at night.
An angel of the Lord appeared to them,
and the glory of the Lord
shone around them,
and they were terrified.
But the angel said to them,
“Do not be afraid. I bring you good news
of great joy that will be for all the people.
Today in the town of David a Savior
has been born to you;
he is Christ the Lord.
This will be a sign to you:
You will find a baby wrapped in cloths
and lying in a manger.”
Suddenly a great company
of the heavenly host
appeared with the angel,
praising God and saying,
“Glory to God in the highest,
and on earth peace to men
on whom his favor rests.”

Luke 2:8-14

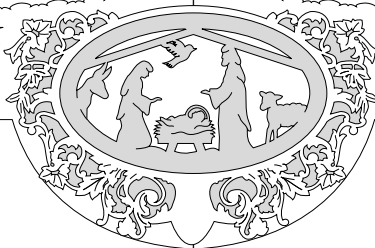

#P598 - THE BIRTH OF CHRIST			
Description	Item	Qty	Size
Top & Bottom	A	2 each	1/8" - 1/4"T x 5 5/8"W x 10"L
Side	B	4	1/8" - 1/4"T x 3 3/4"W x 15 5/8"L
Top Overlay	C	1	1/16" - 1/8"T x 3 5/8"W x 5 3/4"L
Bottom Overlay	D	1	1/16" - 1/8"T x 3 5/8"W x 5 3/4"L
Side Overlay	E	1	1/16" - 1/8"T x 3 3/8"W x 3 3/8"L
Side Overlay	F	1	1/16" - 1/8"T x 3 3/8"W x 3 3/8"L
Star Overlay	G	1	1/16" - 1/8"T x 1 1/2"W x 3"L
Top & Bottom Underlay	H	1 each	1/16" - 1/8"T x 5 1/4"W x 8 3/8"L
Text	I	1 each	1/16" - 1/8"T x cut as needed
Back	*	1	1/4"T x 24 3/4"W x 37"L
• No pattern given - instructions tell how to cut / shape the Back.			

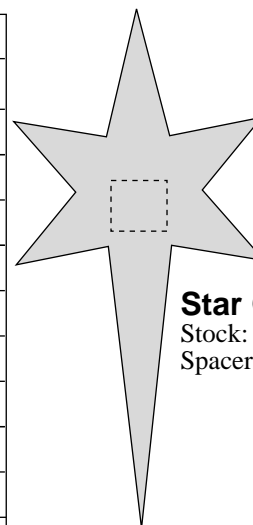

Star Overlay (G)

Stock: 1/16" - 1/8"
Spacer: 1/16" - 1/8"

Side Overlay (E)

Stock: 1/16" - 1/8"


#P598 - Assembly Instructions

1. Select your material from a variety of hardwoods or solid core plywood.
2. Measure each pattern piece and cut the work pieces to size accordingly. Sand as necessary.
3. Make all pattern pieces by adhering the paper patterns to the work pieces with a repositionable spray adhesive. Cut the outer shapes and any interior designs. And drill where indicated.
4. Remove all paper patterns. Sand where needed. The edges can be rounded by sanding or using a small roundover router bit if desired.
5. Assemble by first gluing the 2 Top halves together. Then attach the Overlay, if required. Follow the same procedure for attaching the left and right Sides together, if necessary, and the Bottom.

Now, align the Top with the left and right Sides. And then align the Bottom. Be sure all pieces fit flush before gluing together. If they do not fit flush; adjust by sanding or cutting where necessary.


Next, position the pieces onto the Back workpieces, and tape or clamp to secure. Trace around the outer edges of the framing. Remove the pieces and cut the Back. Stain or finish all pieces before assembling.

Now, reposition the framing pieces onto the Back and secure with glue. To get the proper spacing for the lines of Text on the plaque, place the paper pattern onto the Back. Use a push pin or sharp nail point to mark the ends of each line of Text. The lines of Text on the paper pattern are spaced properly. Remove the paper pattern, and glue the Text lines into place. A magnifier light will help you see the pin holes easier.

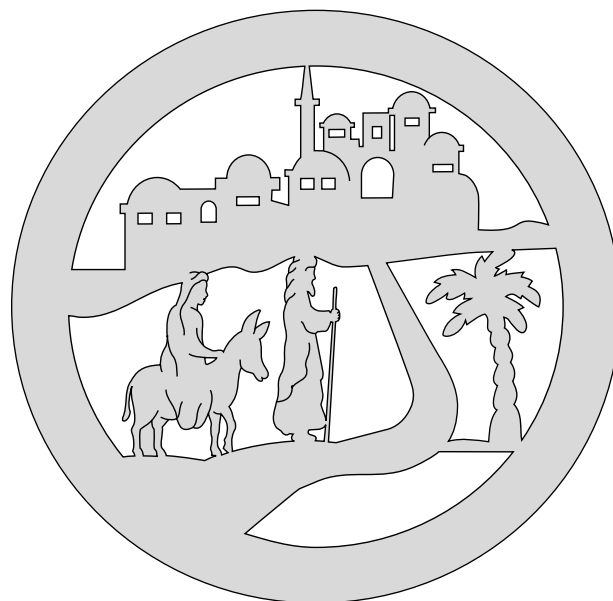

Top Overlay (C)

Stock: 1/16" - 1/8"

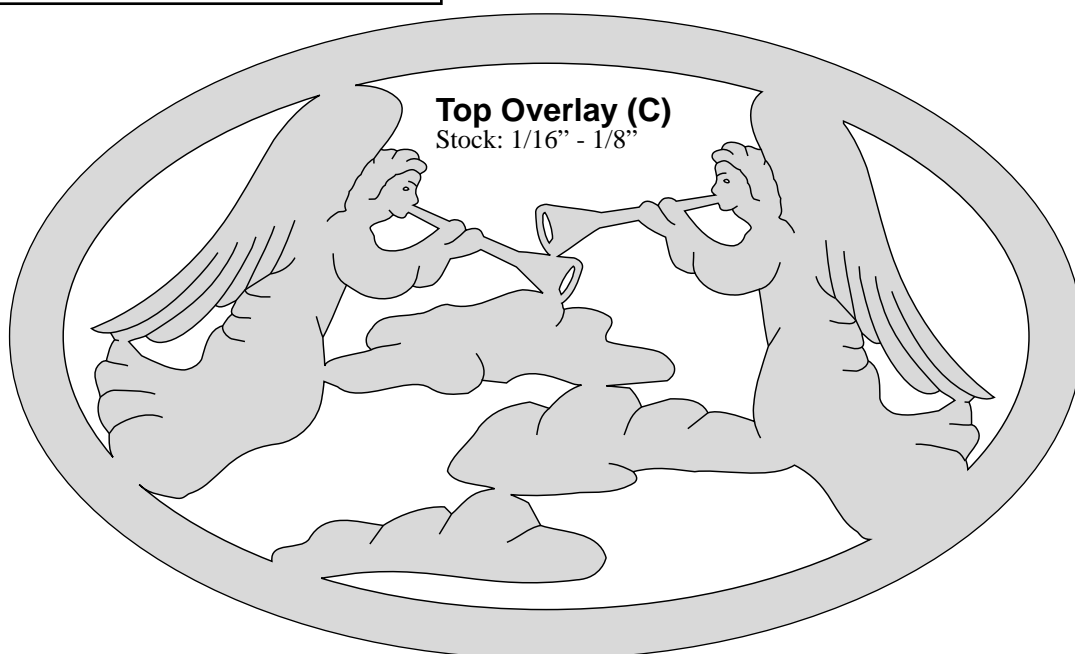


Side Overlay (F)
Stock: 1/16" - 1/8"





Top & Bottom (A)
Stock: 1/8" - 1/4", cut 2 each



Dashed line indicates
placement of Top & Bottom
Underlays.

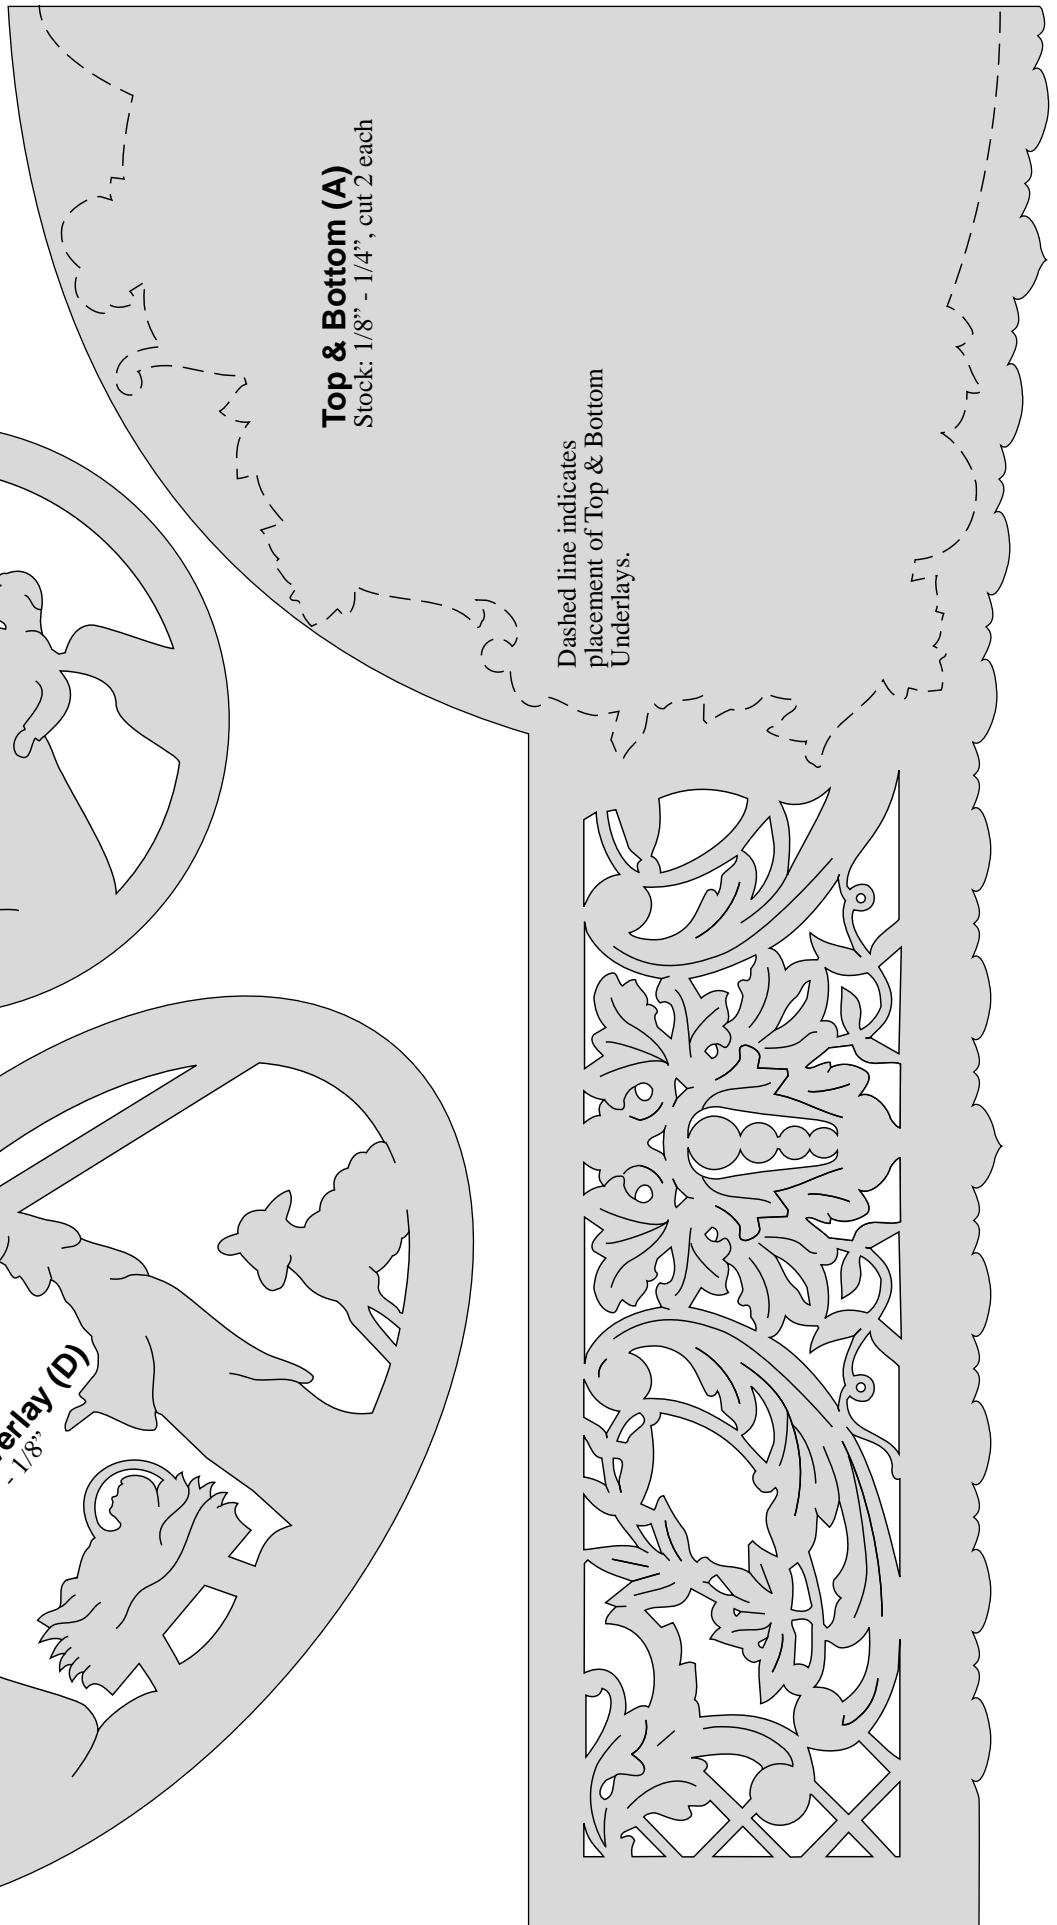


Bottom Overlay (D)
Stock: 1/16" - 1/8"

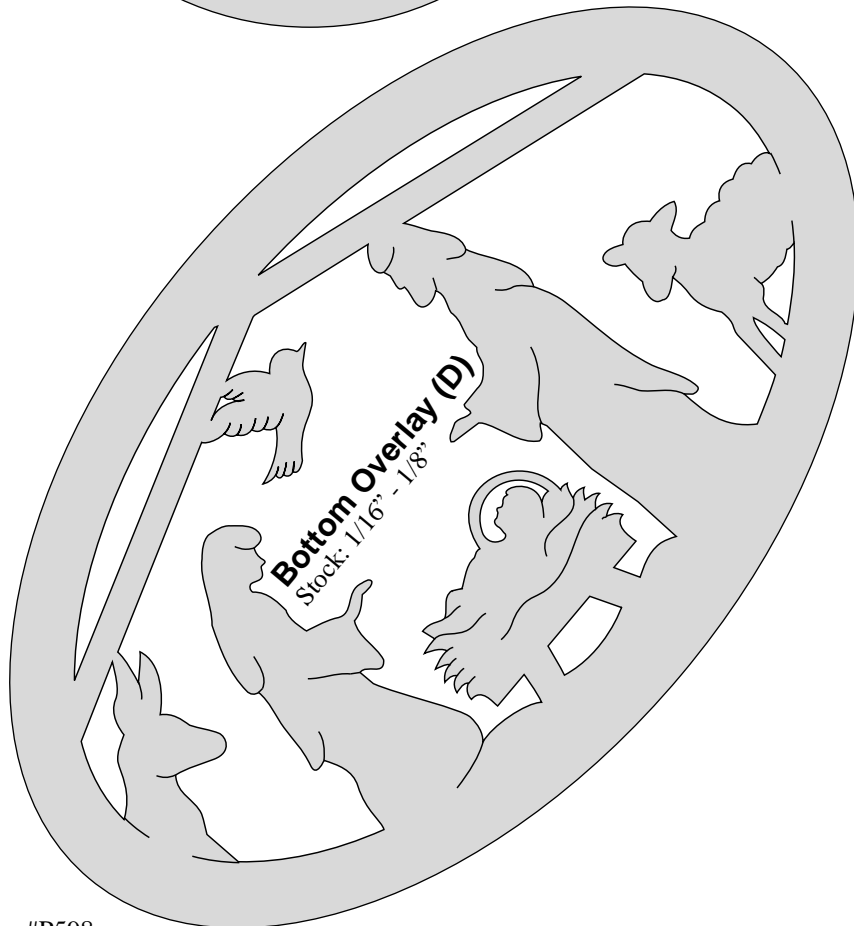

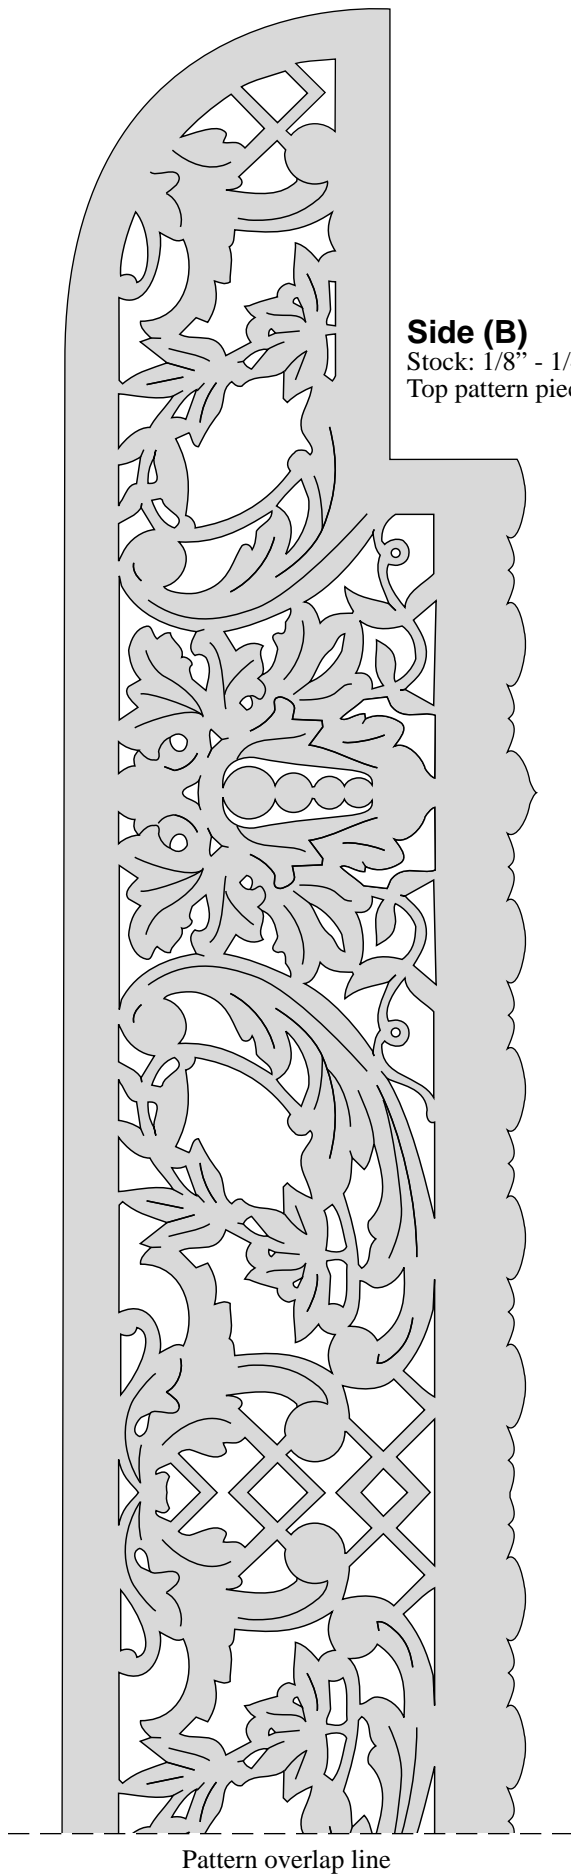

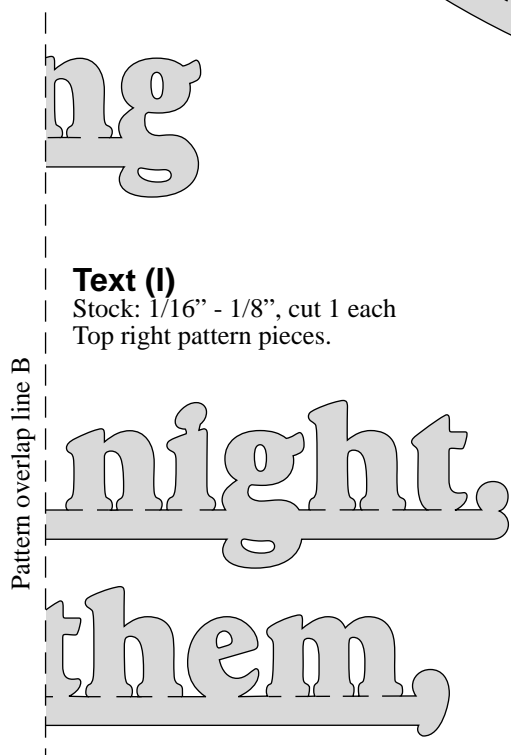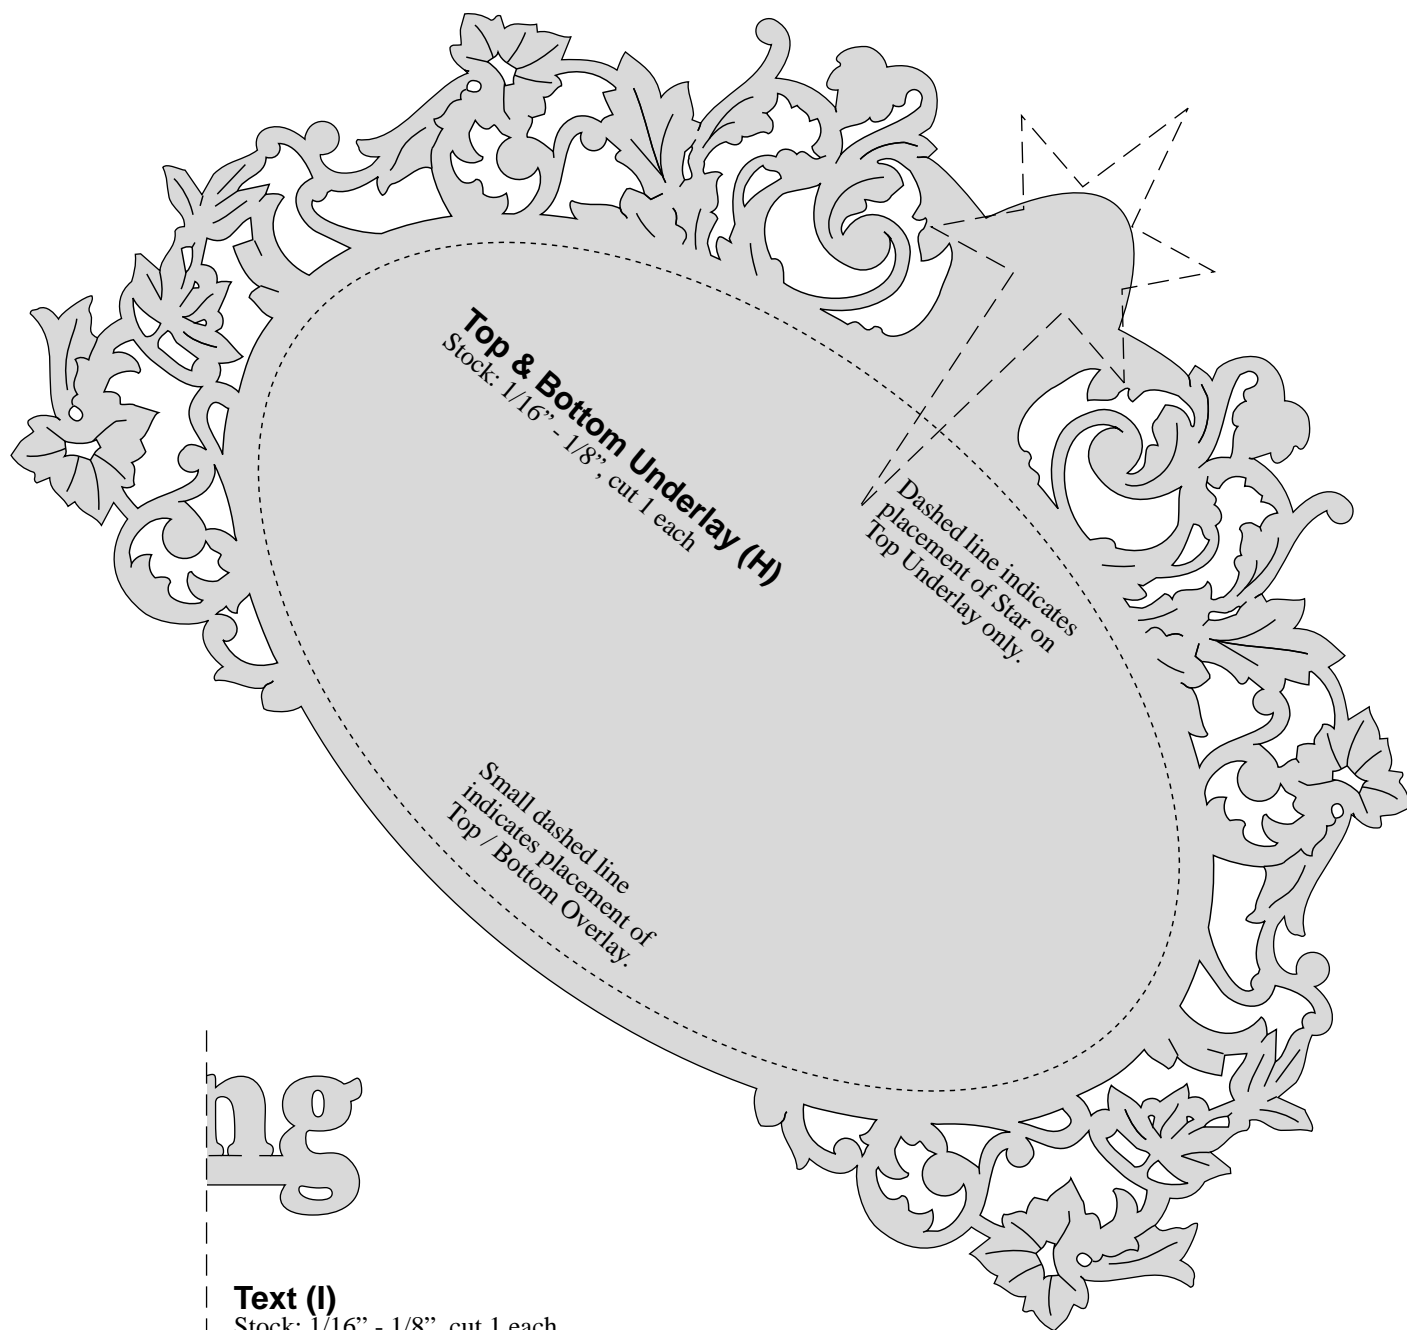

Text (I)
 Stock: 1/16" - 1/8", cut 1 each
 Top right pattern pieces.

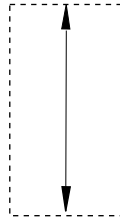


Suggested
space between
headline and
first text line.

The B

Text (I)

Stock: 1/16" - 1/8", cut 1 each
Top left pattern pieces.

And there we



Suggested space
between text
lines. A Spacer
block can be used.

out in the

keeping watch over

An angel of the Lord

and the glory

shone around

and they

But the angel

Pattern overlap line A

Dashed line indicates
position of Top (A).

Birth of Jesus

Dashed line indicates
center of text.

Text (I)

Stock: 1/16" - 1/8", cut 1 each
Top Middle pattern pieces.

ere shepherds living

e fields nearby,

er their flocks at

ord appeared to

lory of the Lord

around them,

were terrified,

gel said to them,

Pattern overlap line A

Pattern overlap line B

“Do not be afraid
of great joy that w
Today in the to

Text (I)

Stock: 1/16" - 1/8", cut 1 each
Left middle pattern piece.

has been

he is Ch

This will I

You will find a b

and lying

Suddenly s

of the h

Pattern overlap line C

Pattern overlap line C

Pattern overlap line D

Dashed line indicates
center of text.

Text (I)
Stock: 1/16" - 1/8", cut 1 each
Center Middle pattern piece.

news

people

rior

Text (I)

Stock: 1/16" - 1/8", cut 1 each
Right middle pattern piece

Pattern overlap line D

oaths

appeared

praising

"Glory to G

and on ear

on whom

Text (I)

Stock: 1/16" - 1/8", cut 1 each
Bottom left pattern pieces.

Lu

Pattern overlap line E

with the angel,
God and saying,
God in the highest,
earth peace to men
his favor rests.”
Luke 2:8-14

Pattern overlap line E

Dashed line indicates
center of text.

Text (I)

Stock: 1/16" - 1/8", cut 1 each
Bottom right pattern pieces.